



PUSH Pillar / PUSH Runge

ADAICO, S.L.

Tudela, s/n - Ciudad del transporte
31119 Imarcoain (Navarra) - España
Tel. +34 948 314 313
Fax +34 948 314 341
E Mail: ventas@adaico.com


ADAICO, Ida.

Rua Simão Bolivar 259 - 5ª Dto. Frente
4470 - 214 Maia - Portugal
Tel. +351 22 941 06 07
Fax +351 22 941 06 11
E Mail: portugal@adaico.com

Export: Tel.: (34) 948 314 328
e-mail: export@adaico.com



ADAICO INTERNATIONAL, GmbH

Oberer Westring 42
33142 Büren - Deutschland
E Mail: export@adaico.com


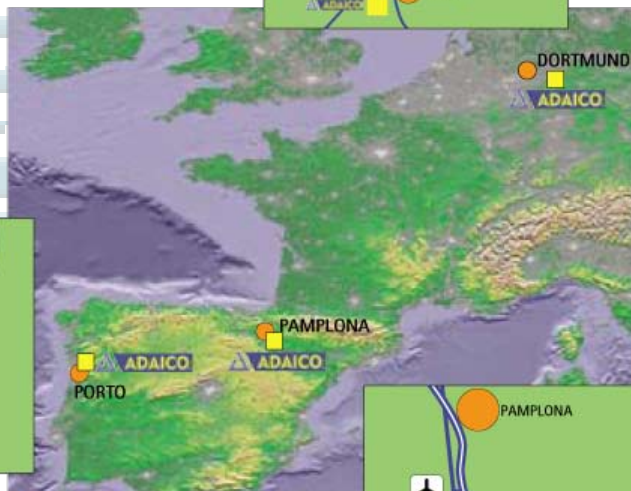


www.adaico.com



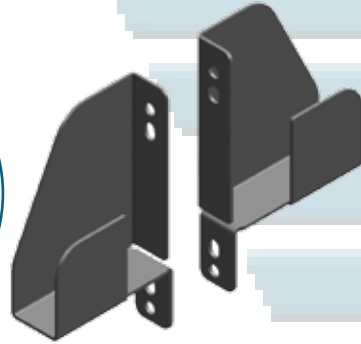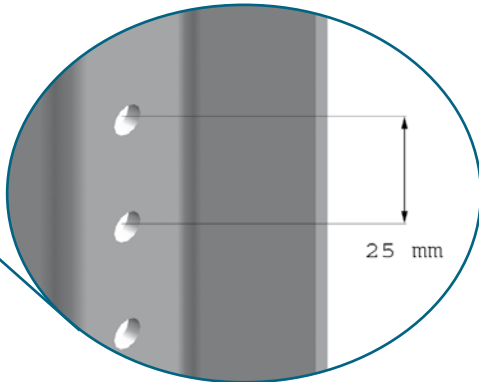

PUSH Mechanism / PUSH Mechanismus

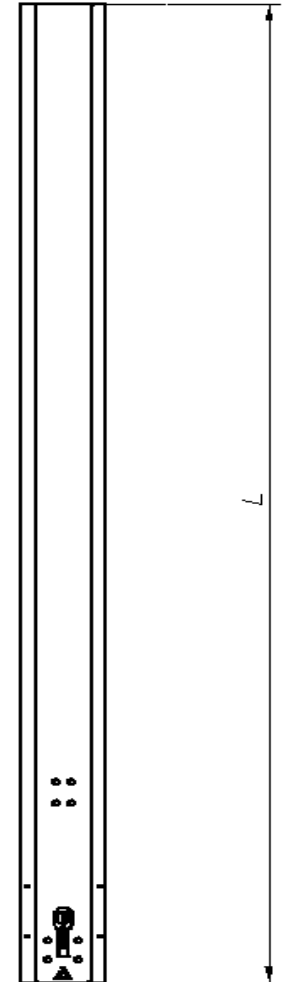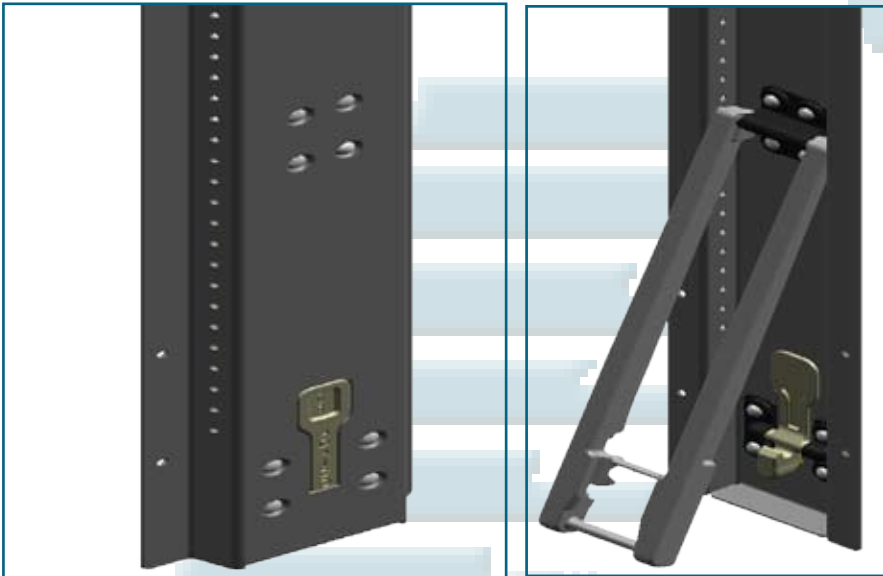

- 1.-Press the button and the pillar will automatically open.
- 2.-Release the pillar to the user.
- 3.-To close it, line up the pillar and the chassis hook and press strongly.
- 4.-The pillar will automatically close.

- 1.-Man Druckt der Drucktaster und das Mechanismus wird automatisch öffnen.
- 2.-Die Runge aus den Anwender herusgehen
- 3.-Zu schliessen man ausricht die Runge und Rungentasche und man druckt.
- 4.-Die Runge wird automatisch schliessen.

